


EH 48 - Complete illustrated parts list

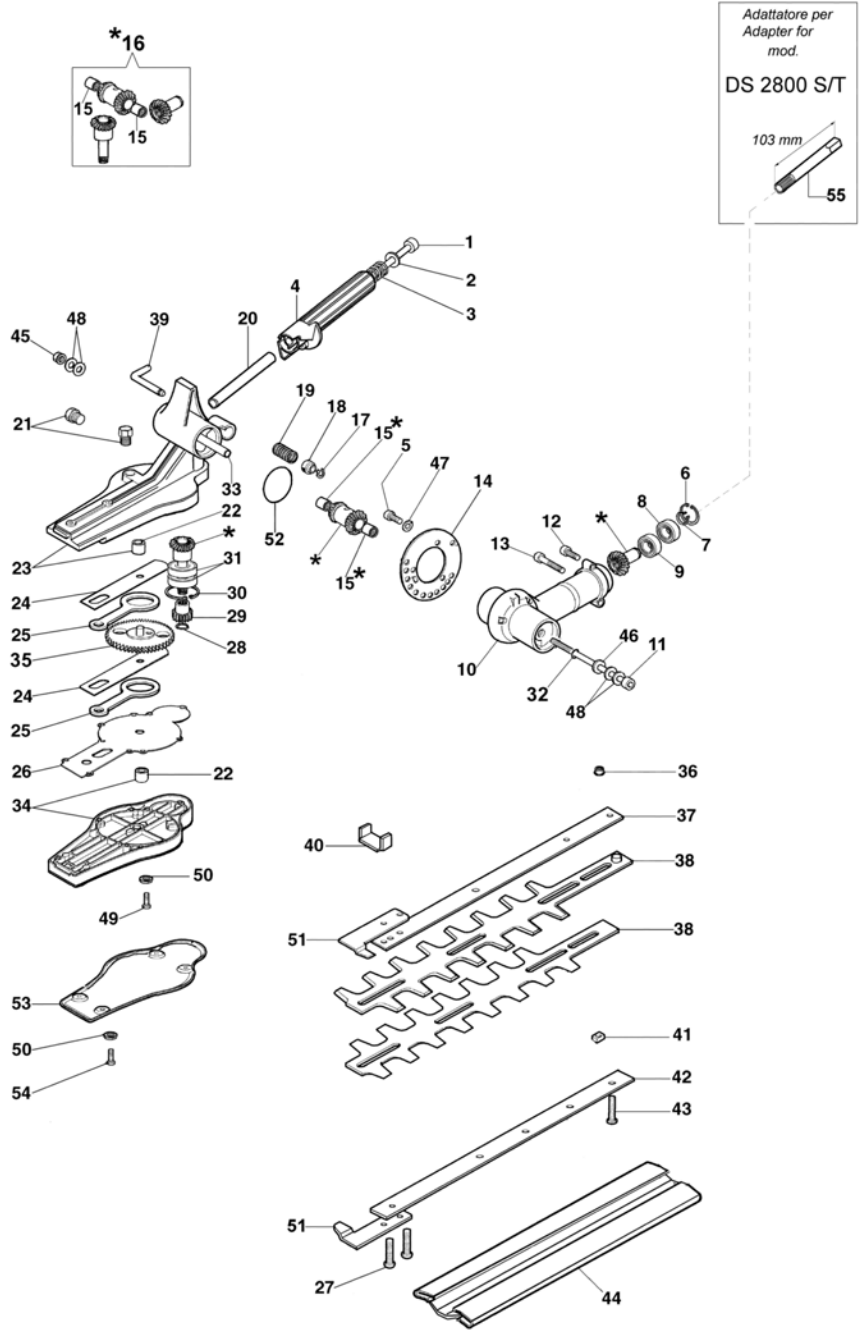

EH 48 - Complete illustrated parts list



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	3901061	Screw				
2	1	3918007	Washer				
3	1	58050016	Spring				
4	1	58050018	Handle				
5	3	3901062	Screw				
6	1	3025027	Snap ring				
7	1	3024009R	Ring				
8	1	3035046	Bearing				
9	1	3034023	Bearing				
10	1	58050048	Half case				
11	1	3901060	Screw				
12	1	3901008	Screw				
13	1	3901016	Screw				
14	1	58050005	Disk				
15	2	3037007	Bushing				
16	1	58050058	Bevel gear set				
17	1	3024006	Snap ring				
18	1	58050014	Bushing				
19	1	58050015	Spring				
20	1	58050017	Pipe				
21	1	61040071R	Cap				
22	2	3067006	Bushing				
23	1	58052008A	Gear housing				
24	2	58040057	Plate				
25	2	58040227AR	Rod				
26	1	58050004	Gasket				
27	2	3801057	Screw				
28	1	3024008	Ring				
29	1	58050011	Sprocket				
30	1	3025020	Snap ring				
31	2	3035009	Bearing				
32	1	008200282	O-ring				
33	1	58050012	Pipe				
34	1	58050002	Cover				
35	1	58040101	Sprocket				
36	4	3980014	Nut				
37	1	58050022	Support				
38	2	58050021	Blade				
39	1	58050013A	Pin				
40	1	58040077A	Gasket				

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
41	5	58040051	Spacer				
42	1	58050023	Support				
43	4	3979021	Screw				
44	1	58050024	Guard				
45	1	3914003	Nut				
46	1	3918005	Washer				
47	3	3819006	Washer				
48	4	3057005	Washer				
49	7	3960074	Screw				
50	11	3819005	Washer				
51	2	58050040	Guard				
52	1	3918005	Washer				
53	1	58050006	Cover				
54	4	3960094	Screw				
55	1	61280095	Adapter drive shaft				