

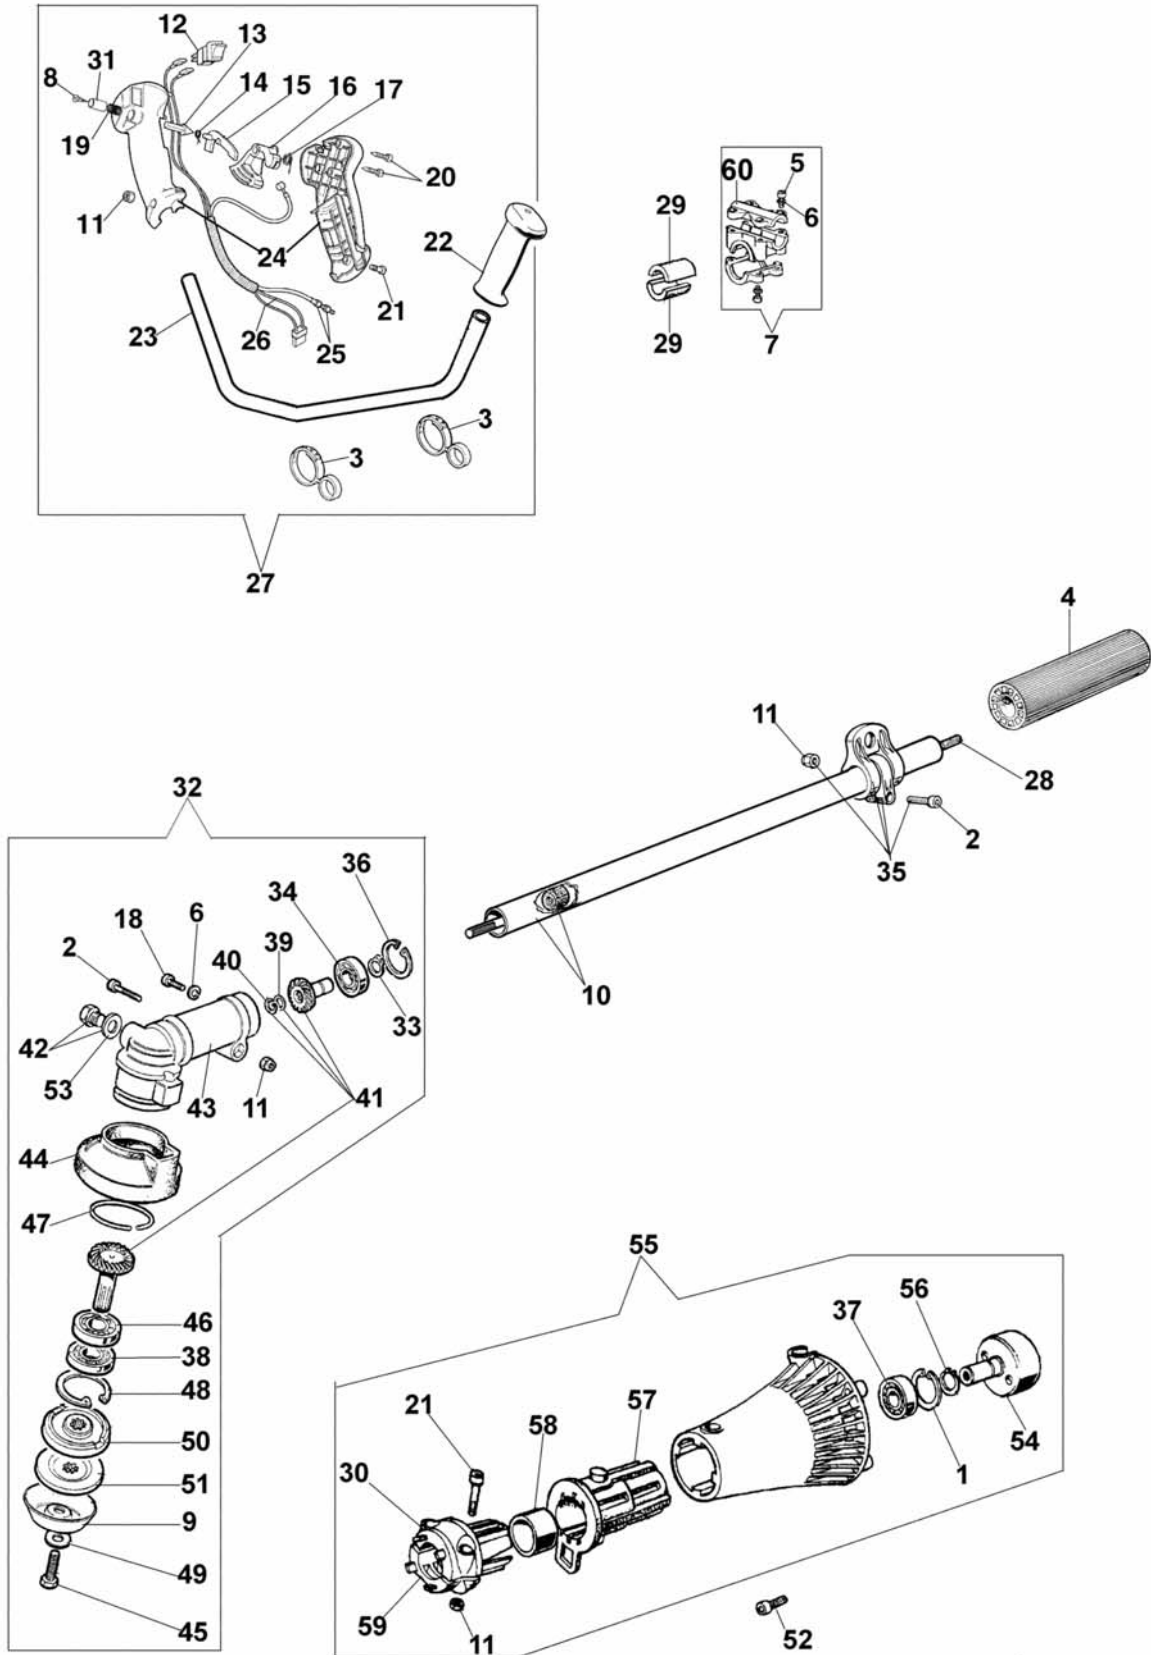
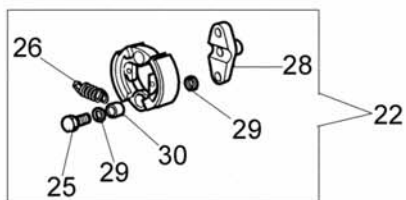
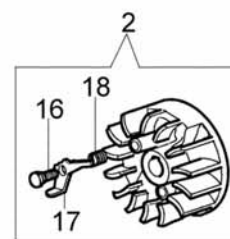
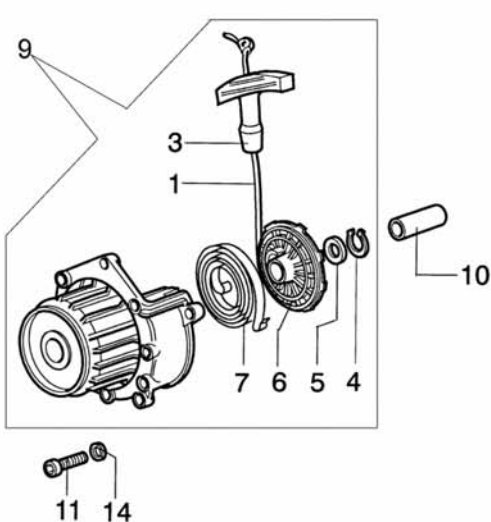
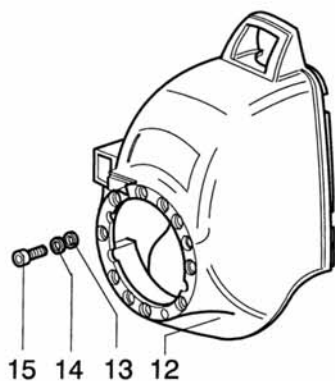


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61160011AR	Breather valve				
2	2	3801012	Screw				
3	2	3833073	Washer				
4	1	61160014AR	Air filter				
5	1	61162007BR	Support				
6	1	2318947R	Carburetor WYL-205				
7	1	4161438	Gasket				
8	2	3916005	Washer				
9	1	61010005	Cover				
10	2	3806028	Screw				
11	1	4095211R	Plate				
12	1	61010011	Gasket				
13	1	072700048R	Piston ring Ø34				
14	2	3801010R	Screw				
15	2	4160025	Ring				
16	1	4161030B	Piston assy Ø34				
17	1	3055101	Spark plug				
18	1	4098232R	Key				
19	1	3064005AR	Washer				
20	1	3024010R	Ring				
21	1	3037006	Bearing				
22	1	4161599R	Rod				
23	1	4160479R	Crankshaft				
24	1	61010012R	Muffler				
25	1	3035040R	Bearing				
26	2	3025019	Ring				
27	1	3035235	Bearing				
28	1	4160124	Ring				
29	1	3050030R	Seal ring				
30	1	61010001R	Cover				
31	4	3801015	Screw				
32	7	3819006	Washer				
33	1	4160026R	Pin				
34	1	4098683	Washer				
35	1	4161570R	Short block				
36	1	3960067AR	Screw				
37	1	4162256AR	Insulator				
38	1	4162257R	Gasket				
39	2	3801047	Screw				
40	1	61162017A	Air filter kit				
41	1	4162297	Fuel line				
42	1	4162268R	Bushing				
43	1	4162296	Tube				
44	1	4151258R	Cpl. cap				
45	1	4100308	Gasket				
46	1	61032026R	Tank				
47	1	094600450R	Fuel filter				
48	3	3918005	Washer				
49	1	61010004	Stand				
50	1	61010002	Support				
51	1	3049040	O-ring				
52	2	4098377	Band				
53	1	3059002	Band				
54	1	4162270A	Fittings				
55	1	4162316	Tube				
56	3	3960057R	Screw				
57	1	4098658AR	Breather valve				
58	1	61150023	Flange				

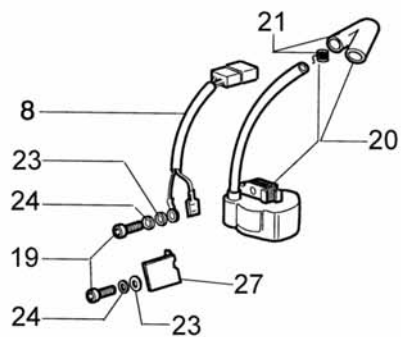

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	3025019	Ring				
2	2	3801015	Screw				
3	1	61170132R	Grommet				
4	1	4160262B	Hand grip				
5	8	3801013R	Screw				
6	10	3819006	Washer				
7	1	074000183R	Clamp		05/2011		
7	1	074000183AR	Clamp	06/2011			BT3-106-04/11
8	1	3960021	Screw				
9	1	4100456R	Guard				
10	1	4160011R	Tube Ø26				
11	3	3914003	Nut				
12	1	2317021R	Switch				
13	1	4138358R	Switch				
14	1	4138360R	Spring				
15	1	4174246AR	Lever				
16	1	4174245CR	Throttle lev				
17	1	4138361R	Spring				
18	1	3801008	Screw				
19	1	4100098BR	Spring				
20	2	3960029	Screw				
21	2	3801016	Screw				
22	1	4095032A	Hand grip				
23	1	4174187BR	Handle				
24	1	61040131R	Handle				
25	1	4161439A	Throttle cable				
26	1	4161440A	Cable				
27	1	4161477AR	Handle				
28	1	62030042R	Drive shaft				
29	2	072700082R	Shock absorber				
30	1	61010021	Adaptor				
31	1	4138359R	Switch				
32	1	4160012AR	Bevel gear Ø26				
33	1	3024010R	Ring				
34	1	3035005R	Bearing				
35	1	4161619R	Band d.26				
36	1	3025018	Ring				
37	1	3035023R	Hook				
38	1	3035012	Bearing				
39	1	4138311A	Ring				
40	1	3025009	Ring				
41	1	4160139	Bevel gear set				
42	1	4138428	Cap				
43	1	4160338R	Gear case				
44	1	4162177AR	Guard				
45	1	3806069R	Screw				
46	1	094000006R	Bearing				
47	1	4162178	Spring				
48	1	3025021	Ring				
49	1	3916008R	Washer				
50	1	4160004BR	Flange				
51	1	4160005R	Flange				
52	4	4175074	Screw				
53	1	4179141	Washer				
54	1	4161343R	Clutch drum				
55	1	61032029R	Clutch cover				
56	4	3024012	Ring				
57	1	4161428	Shock absorber				
58	1	4161364	Bushing				
59	1	61010020	Adaptor				
60	1	072700264CR	Clamp	06/2011			BT3-106-04/11




8270 T - Starter assy and clutch







Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	4160125R	Starter rope				
2	1	4161264BR	Flywheel				
3	1	4191020A	Handle				
4	1	3024018R	Ring				
5	1	4161150R	Ring				
6	1	4161148AR	Pulley				
7	1	004000132R	Spring				
8	1	4162266A	Cable				
9	1	4161160AR	Starter assy				
10	2	4160072R	Spacer				
11	1	3801010R	Screw				
12	1	61010027R	Cover				
13	4	3916005	Washer				
14	4	3916006	Washer				
15	4	3801009	Screw				
16	1	4161151	Pin				
17	1	4138441	Pawl				
18	1	4161186A	Spring				
19	2	3801003	Screw				
20	1	4138722R	Ignition coil				
21	1	4098064R	Spark plug cap				
22	1	4161202R	Clutch				
23	2	3916004	Washer				
24	2	3819005	Washer				
25	2	3806035	Screw				
26	1	4161200	Spring				
27	1	4160146AR	Deflector				
28	1	4161199	Clutch driver				
29	2	3918007	Washer				
30	2	4161201	Bushing				
31	1	61032053	Labels kit				

Mod. WYL-205B
compl. p/n 2318947AR

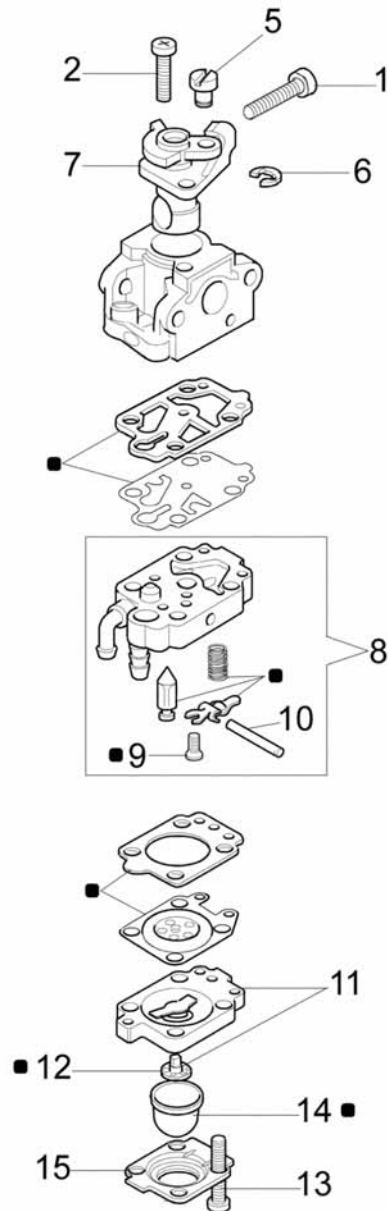

■ 4 KIT RIPARAZIONE
REPAIR KIT

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318583	Screw				Sruba
2	2	2318954	Screw				Sruba
4	1	2318674	Repair kit				Zestaw naprawczy
5	1	2318577	Adjuster screw				Nakrętka regulacyjna
6	1	2318189	Ring				Pierscien
7	1	2318958	Valve				Zawór
8	1	2318567	Pump body				Korpus pompy
9	1	2318569	Screw				Sruba
10	1	003300201	Spindle				Walek napedowy
11	1	2318570	Primer body				Korpus pompy
12	1	2318592	Valve				Zawór
13	4	2318585	Screw				Sruba
14	1	2318572	Primer pump				Pompa paliwa
15	1	2318571	Cover				Pokrywa

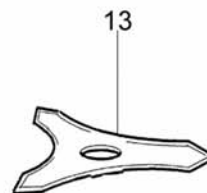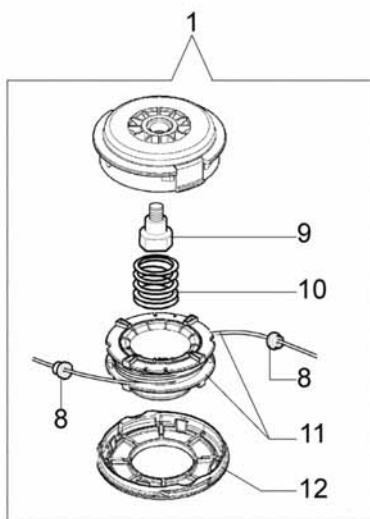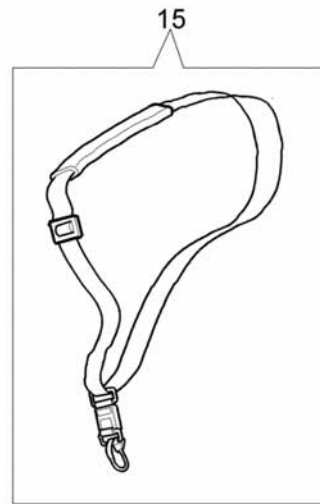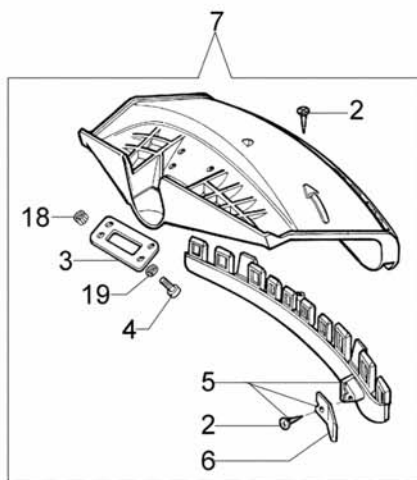

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63019001C	Tap'n go head with 2 nylon lines				
2	2	3960040R	Screw				
3	1	61240161R	Plate				
4	4	3801011	Screw				
5	1	4179113A	Skirt w/blade				
6	1	4174275R	Blade				
7	1	4161506A	Guard				
8	2	4199005A	Bushing				
9	1	4199008B	Insert				
10	1	4199004	Spring				
11	1	4199014A	Nylon spool Ø2.4				
12	1	4199046	Cover				
13	1	4095673AR	Disk 3t				
14	1	61052031	Tool kit				
15	1	4160463AR	Single harness				
16	1	61032053	Labels kit				
17	1	4160236R	Band				
18	4	3914003	Nut				
19	4	3819006	Washer				