


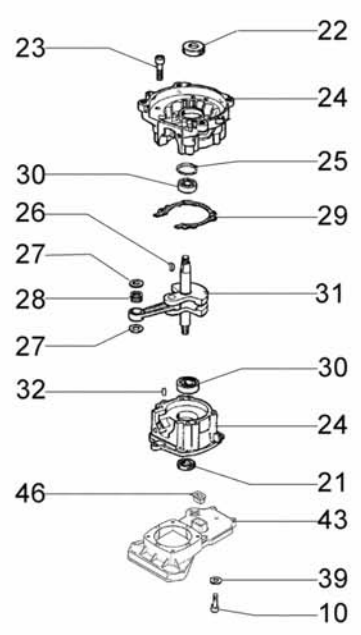
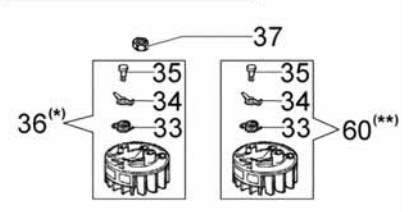
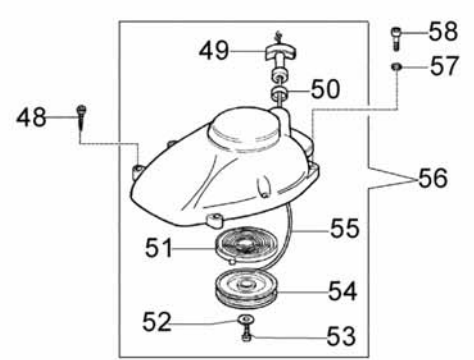
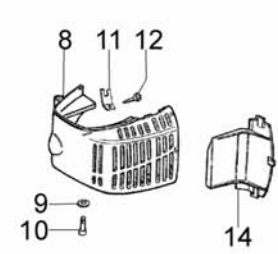
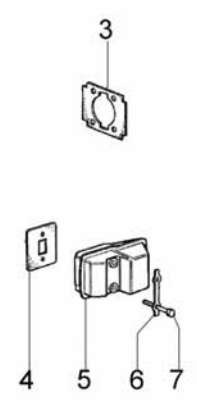
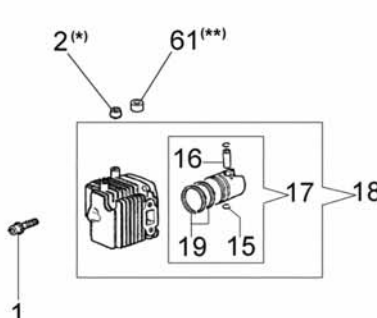
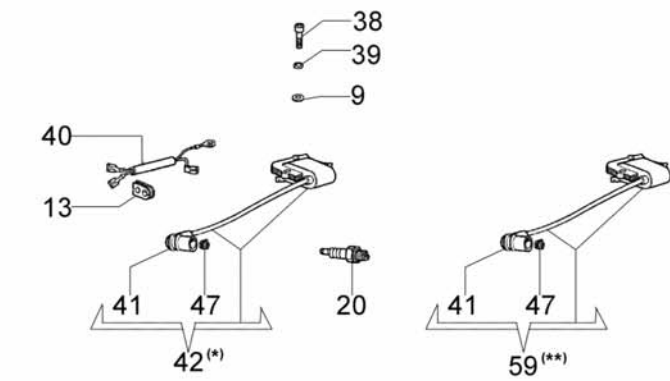
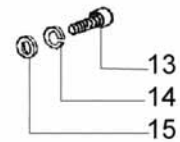


(*) Fino a - till - bis - hasta
Jusqu'a - do: 31/10/07

(**) Da - from - ab - desde
Depuis - od: 01/11/07

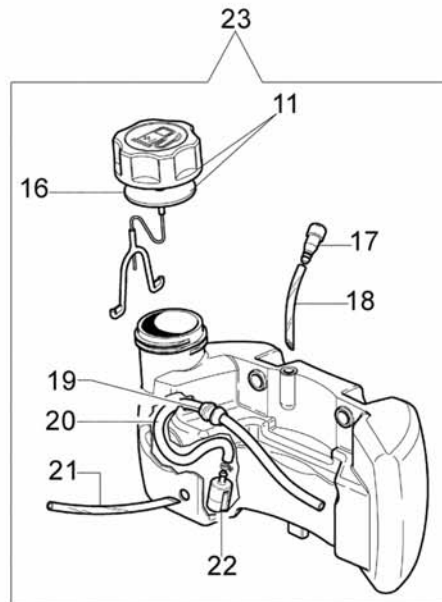


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	61070060	Screw				
2	2	50070148	Spacer				BT6-062-07/08
3	1	61070059	Gasket				
4	1	61070033	Gasket				
5	1	58040021	Muffler				
6	1	61070055	Plate				
7	2	3806027	Screw				
8	1	61070026A	Cover				
9	3	3916004	Washer				
10	5	3801022	Screw				
11	2	4191069B	Plate				
12	2	3960030	Screw				
13	1	072700036A	Grommet				
14	1	61070027	Cover				
15	2	61070067	Ring				
16	1	61070066	Piston pin				
17	1	61070107	Piston assy Ø34				
18	1	61070072A	Cpl. cylinder Ø34				
19	2	61070065R	Piston ring Ø34				
20	1	3055104R	Spark plug				
21	1	61070074	Seal ring				
22	1	61070075	Seal ring				
23	4	61070063	Screw				
24	1	61070061R	Crankcase				
25	1	3025019	Ring				
26	1	61070070	Key				
27	2	61070068	Spacer				
28	1	61070076	Bearing				
29	1	61070062	Gasket				
30	2	3035040R	Bearing				
31	1	58040027	Crankshaft				
32	2	61070073	Pin				
33	2	58040004	Spring				
34	2	58040003	Pawl				
35	2	4161151	Pin				
36	1	58040023AR	Flywheel				BT6-062-07/08
37	1	3980012	Nut				
38	2	006000085	Screw				
39	2	3819005	Washer				
40	1	61070012R	Cable				
41	1	094600097A	Spark plug cap				
42	1	56510066R	Ignition coil				BT6-062-07/08
43	1	58040291	Cover				
44	2	58040012AR	Spring				
45	1	58040134AR	Clutch				
46	1	4162265	Rubber boot				
47	1	094600169A	Spring				
48	2	3960064AR	Screw				
49	1	093500397	Handle				
50	1	072700089	Bushing				
51	1	61070036R	Spring				
52	1	094600451	Washer				
53	1	3960070	Screw				
54	1	58040019BR	Starter pulley				
55	1	61070019AR	Starter rope				
56	1	58042002BR	Starter assy				
57	4	3916005	Washer				
58	3	3801013R	Screw				
59	1	58040344AR	Ignition coil				BT6-062-07/08
60	1	58040350R	Flywheel				BT6-062-07/08
61	2	61170014	Spacer				BT6-062-07/08

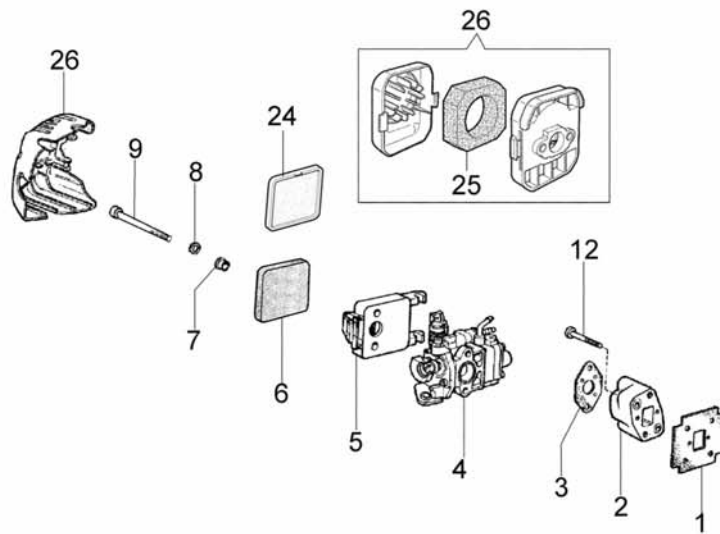




TS 327 - Fuel tank and air filter



Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	61070004	Insulator				
2	1	61070007	Gasket				
3	1	4161438	Gasket				
4	1	2318910R	Carburetor WYJ-228A				BT6-062-07/08
4	1	2318847R	Carburetor WYJ-442				BT6-062-07/08
5	1	61070003E	Support				BT6-061-07/08
6	1	56510064R	Air filter				BT6-011-11/02
7	2	61040020	Bushing				BT6-061-07/08
8	2	3833073	Washer				
9	2	61052009B	Screw				
11	1	61070079R	Tank cap				
12	2	3801047	Screw				
13	3	3801013R	Screw				
14	3	3819006	Washer				
15	3	3918005	Washer				
16	1	61070006	Gasket				
17	1	61070011A	Breather valve				
18	1	61070078	Tube				
19	1	4161211	Bush				
20	1	58042150	Tube				
21	1	61110034	Tube				
22	1	094600450R	Fuel filter				
23	1	58040293R	Tank				
24	1	56510064R	Air filter				BT6-011-11/02
25	1	58040396R	Air filter				BT6-061-07/08
26	1	58040395R	Filter kit				BT6-061-07/08

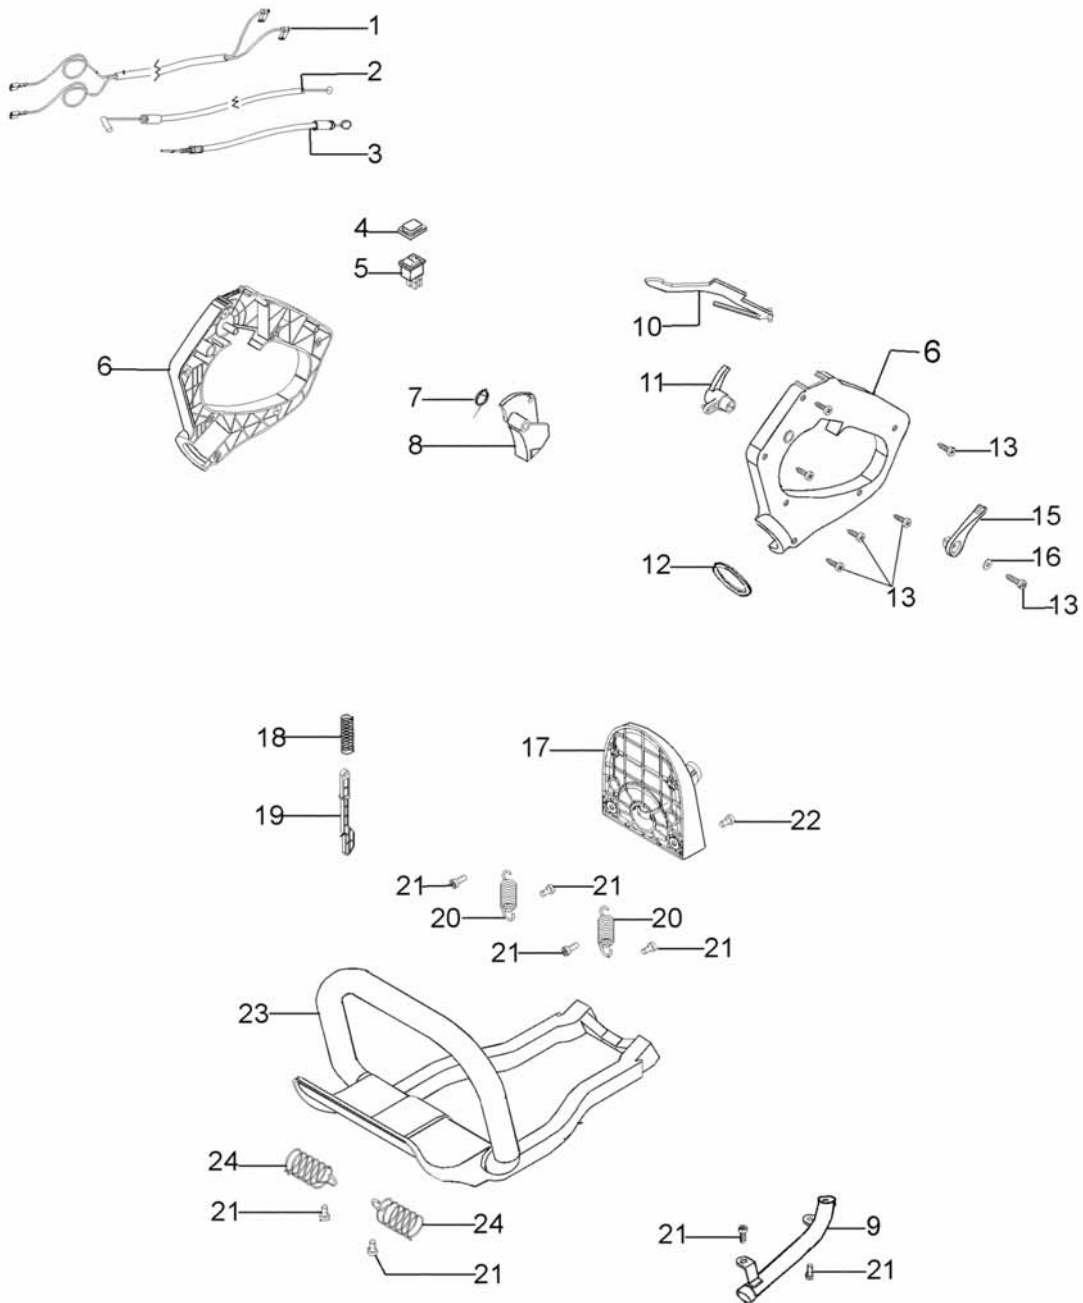


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	58040086	Cable				
2	1	58040087	Throttle cable				
3	1	58040075	Throttle cable				
4	1	2317013	Guard				
5	1	2317021R	Switch				
6	1	58040393	Half grip kit				
7	1	58040136	Spring				
8	1	58040084	Throttle lever				
9	1	58040135	Deflector				
10	1	58040085	Lever				
11	1	58040088	Lever				
12	1	3027015	Ring				
13	7	3960067AR	Screw				
15	1	58040089	Lever				
16	1	3918003	Washer				
17	1	58040081	Support				
18	1	58040091	Spring				
19	1	58040090	Throttle				
20	2	58040080	Spring				
21	8	3960073	Screw				
22	11	3960082B	Screw				
23	1	58040078A	Handle				
24	2	58040079AR	Spring				

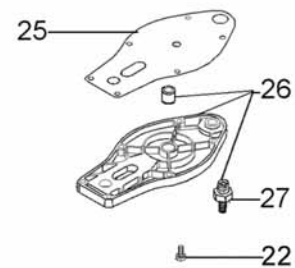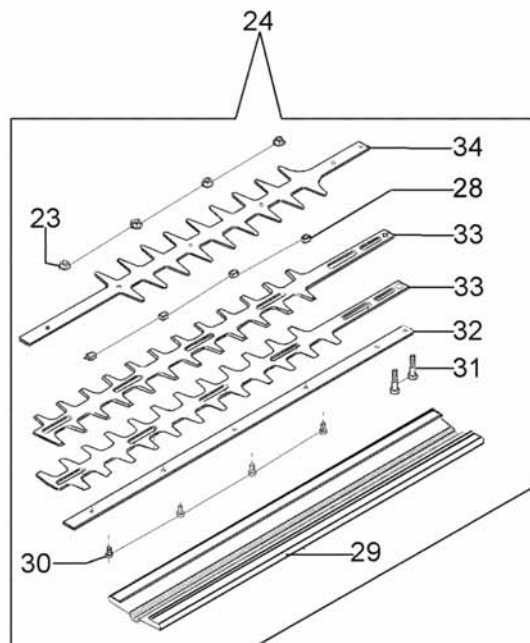
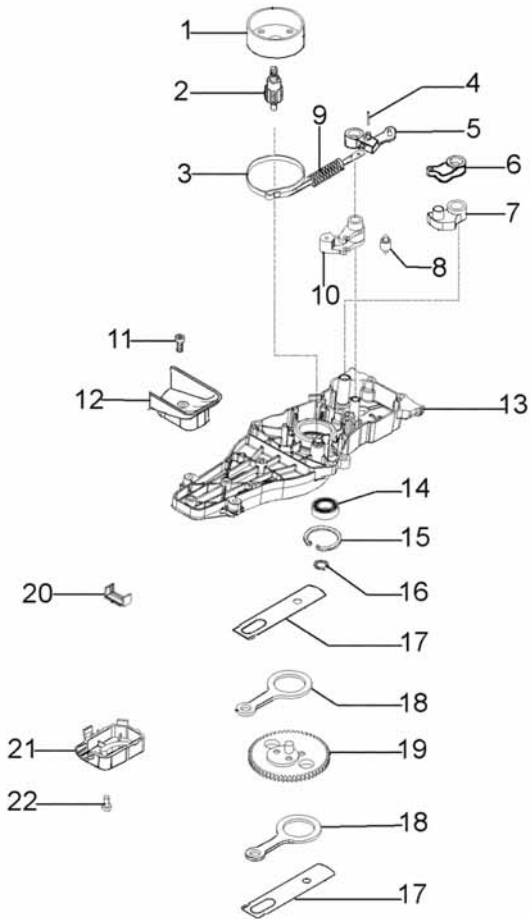


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	58040218R	Clutch drum				
2	1	58040272R	Chain sprocket				
3	1	58040017	Brake band				
4	1	3033019	Roller				
5	1	58040070	Lever				
6	1	58040074	Lever				
7	1	58040073	Cam				
8	1	58040072	Roller				
9	2	58040091	Spring				
10	1	58040095	Lever				
11	8	3960093	Screw				
12	1	58040097	Deflector				
13	1	58042021A	Gear housing				
14	1	3035019R	Bearing				
15	1	3025022	Ring				
16	1	3024015	Ring				
17	2	58040057	Plate				
18	2	58040227AR	Rod				
19	1	58040275	Bevel gear				
20	1	58040077A	Gasket				
21	1	58040076	Cover				
22	11	3960082B	Screw				
23	4	3980014	Nut				
24	1	58040093AR	Blades assy				
25	1	58040058A	Gasket				
26	1	58042148	Cover				
27	1	58040180	Nipple				
28	6	58040051	Spacer				
29	1	58040092	Guard				
30	4	3979021	Screw				
31	2	3801057	Screw				
32	1	58040045	Support				
33	2	58040043AR	Blade				
34	1	58040044	Guard				

mod. WYJ - 228A
 compl. p.n. 2318910R

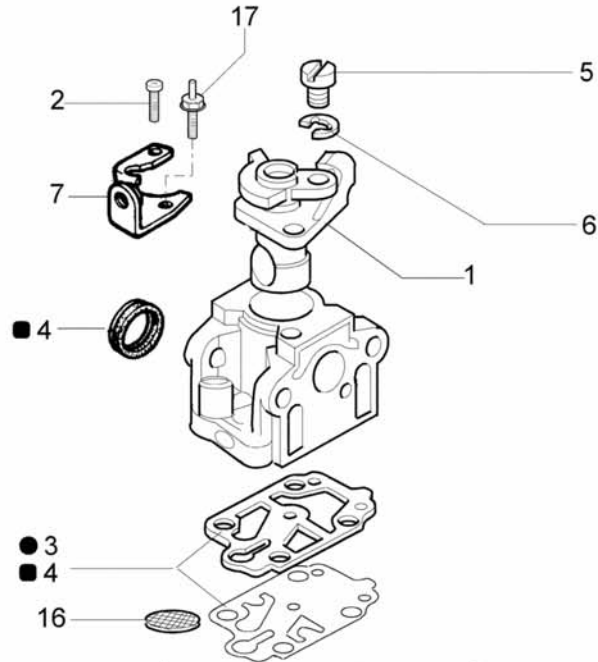


- 3 KIT MEMBRANE & GUARNIZIONI
 DIAPHRAGM & GASKET SET
- 4 KIT RIPARAZIONE
 REPAIR KIT

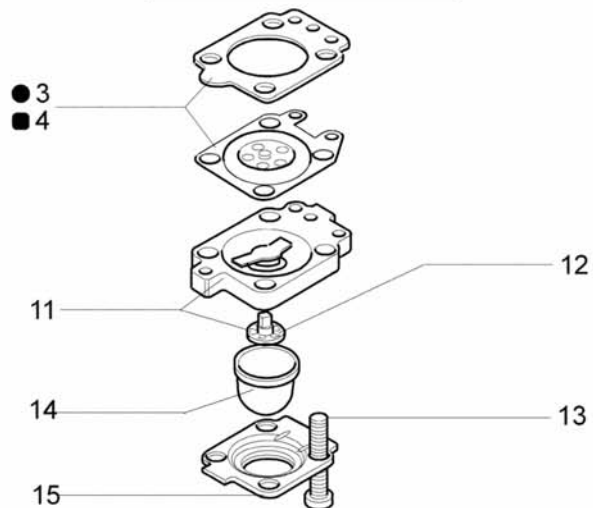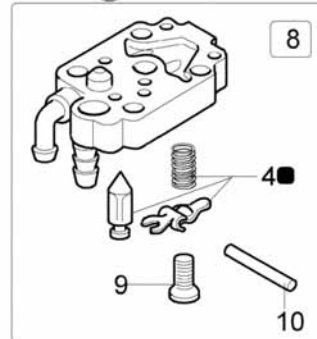


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318814	Valve				
2	1	2318580	Screw				
3	1	2318590	Gasket set				
4	1	2318591	Repair kit				
5	1	2318577	Adjuster screw				
6	1	2318189	Ring				
7	1	2318813	Support				
8	1	2318811	Pump body				
9	1	2318569	Screw				
10	1	003300201	Spindle				
11	1	2318570	Primer body				
12	1	2318592	Valve				
13	4	2318585	Screw				
14	1	2318572	Primer pump				
15	1	2318571	Cover				
16	1	003300204	Fuel filter				
17	1	2318819	Screw				

Walbro WYJ-442

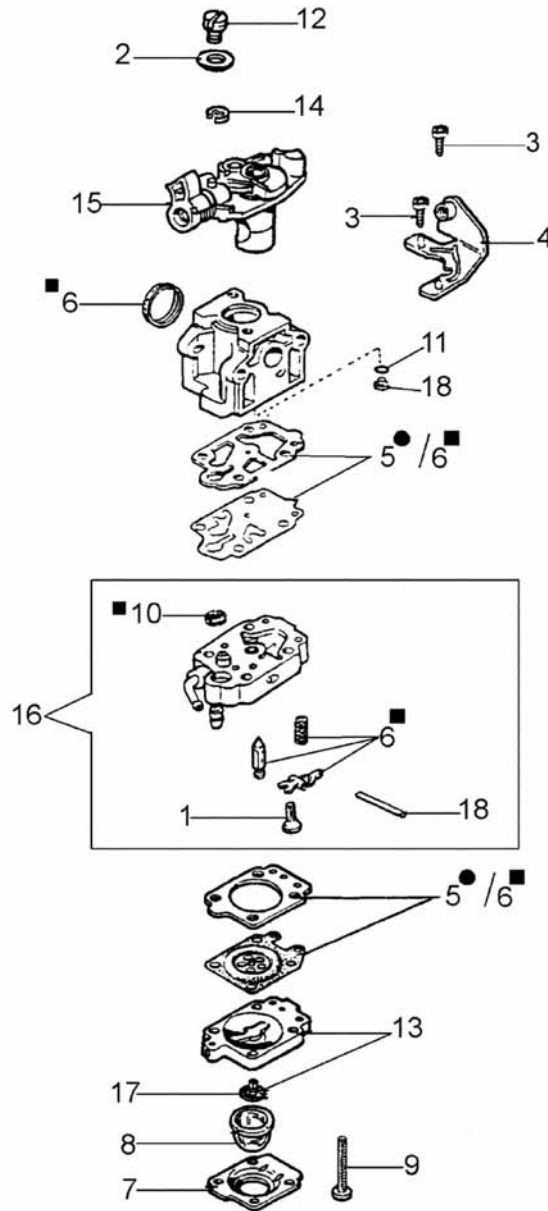

5 ● **KIT MEMBRANE & GUARNIZIONI**
DIAPHRAGM & GASKET SET

6 ■ **KIT RIPARAZIONE**
REPAIR KIT

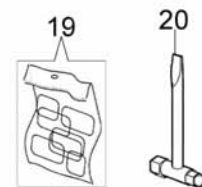

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318569	Screw				
2	1	2318703	Washer				
3	2	2318580	Screw				
4	1	2318813	Support				
5	1	2318590	Gasket set				
6	1	2318591	Repair kit				
7	1	2318571	Cover				
8	1	2318572	Primer pump				
9	1	2318585	Screw				
10	1	003300204	Fuel filter				
11	1	2318701	O-ring				
12	1	2318577	Adjuster screw				
13	1	2318570	Primer body				
14	1	2318189	Ring				
15	1	2318902	Valve				
16	1	2318815	Pump body				
17	1	2318592	Valve				
18	1	003300201	Spindle				
19	1	58042169	Labels set				
20	1	2304073	Wrench 13x19				